


DIMENSION 31.8 MTB FLAT & RISER HANDLEBAR INSTRUCTIONS

Thank you for purchasing a Dimension handlebar.

⚠ WARNING: Cycling can be dangerous. Bicycle products should be installed and serviced by a professional mechanic. Never modify your bicycle or accessories. Read and follow all product instructions and warnings including information on the manufacturer's website. Inspect your bicycle before every ride. Always wear a helmet.

For additional product and safety information go to:
www.dimensionbikeproducts.com/safety

COMPATIBILITY & INTENDED USE

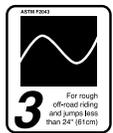

Dimension MTB bars with 31.8mm clamp are intended for mountain bike use under ASTM Condition 3.

Intended for ASTM 3 conditions, defined as rough trails, rough unpaved roads, rough terrain, and unimproved trails that require technical skills. Jumps and drops should not exceed 24" (61cm). NOT INTENDED for hardcore freeriding, extreme downhill, dirt jumping, slopestyle, or very aggressive or extreme riding.

⚠ WARNING: Dimension 31.8 MTB handlebars are compatible with bar ends no longer than 110mm.

⚠ WARNING: Not for use with clip-on aerobars.

For complete ASTM guidelines, please visit
www.dimensionbikeproducts.com/safety.

TOOLS

Hex or Torx Wrenches that match your stem hardware
Torque wrench that measures in Nm
Grease

INSTALLATION

1. Remove the bolts from the stem faceplate.
2. Before tightening the stem to the bar, remove any sharp edges or burrs with 400-grit (ISO P-800) sandpaper.
3. Lubricate the handlebar clamp bolts with grease.
4. Lightly clamp the handlebar face plate onto center of the handlebar, inserting and tightening both bolts just enough to hold the bar.
5. Center and rotate the handlebar to the desired position.
6. Tighten the stem faceplate bolts according to stem manufacturer's instructions and torque specifications.
7. Before installing control lever clamping bands, remove any sharp edges or burrs. Then torque shift/brake and handlebar grip clamps to manufacturer's specifications. Do not exceed 8Nm.

SAFETY CHECK

1. After properly torquing the stem and control levers, straddle the toptube, squeezing the front wheel between your legs, grab the control levers and make a strong attempt to rotate the handlebar up or down. If the bar rotates, increase the face plate bolt torque making sure to not exceed specifications in Step 6.
If the brake/shift levers rotate, increase the torque on the lever clamps but do not exceed specifications in Step 7.
2. Check the tightness of the stem bolts before each ride.

⚠ WARNING: Improper installation of mounted component bolts may lead to product failure, causing serious injury. Do not exceed specified torque values. Periodically inspect bolts and retighten if required.

LIMITED 2-YEAR WARRANTY

Dimension warrants this new Dimension product against defects in materials and workmanship for two (2) years from the original date of retail purchase by the consumer. This limited warranty is expressly limited to the repair or replacement of the original product, at the option of Dimension, and is the sole remedy of the warranty. This limited warranty applies only to the original purchaser of the Dimension product and is not transferable.

In no event shall Dimension be liable for any loss, inconvenience or damage, whether direct, incidental or consequential or otherwise resulting from breach of any express or implied warranty or condition of merchantability, fitness for a particular purpose, or otherwise with respect to this product except as set forth herein. This warranty gives the consumer specific legal rights, and those rights and other rights may vary from state to state.

This warranty does not cover the following:

- Damage due to improper assembly or follow-up maintenance or lack of skill, competence or experience of the end user
- Products that have been modified, neglected, used in competition or for commercial purposes, misused or abused, involved in accidents or anything other than normal use
- Damage or deterioration to the surface finish, aesthetics or appearance of the Dimension product
- Normal wear and tear
- Labor required to remove and/or refit and re-adjust the product within the bicycle assembly
- Installation of components, parts, or accessories not originally intended for or compatible with Dimension products

TO THE EXTENT NOT PROHIBITED BY LAW, THESE WARRANTIES ARE EXCLUSIVE AND THERE ARE NO OTHER EXPRESS OR IMPLIED WARRANTIES OR CONDITIONS INCLUDING WARRANTIES OR CONDITIONS OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

6400 WEST 105TH STREET
BLOOMINGTON, MN 55438

info@dimensionbikeproducts.com

1-855-883-6563

24601 11/17



dimension
BICYCLE COMPONENTS